




# Brake Components


# Braking Components Tanks, Chambers & Valves

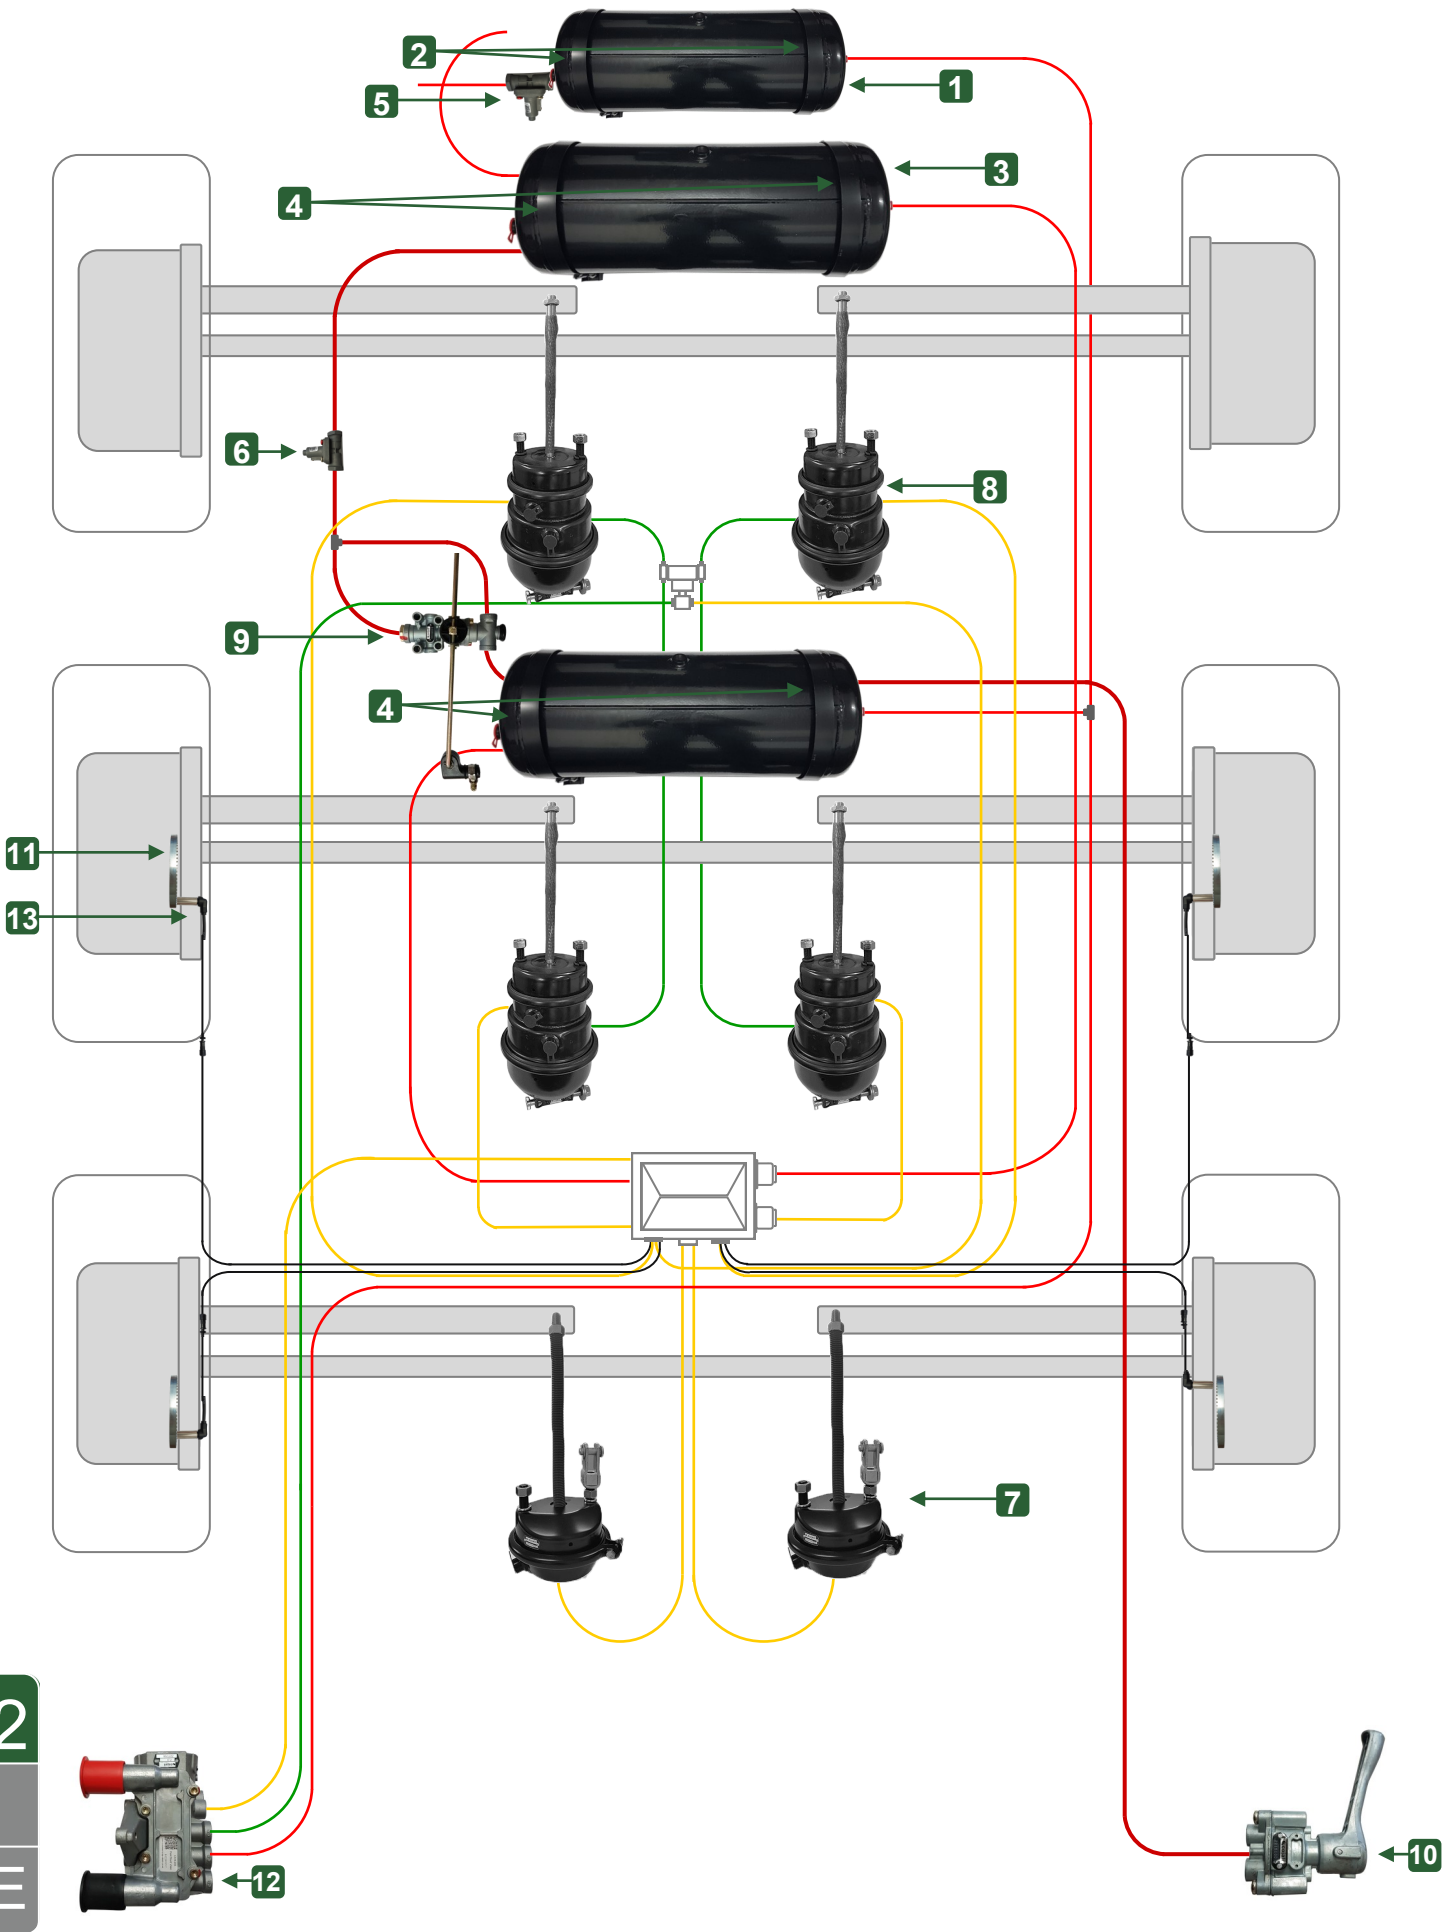

12  
1  
TE

\*Manufacturers and other wholesalers part numbers & names are used for cross reference purpose only and do not imply anything about the origin or manufacturer of the products\*

## Braking Components Tanks, Chambers & Valves

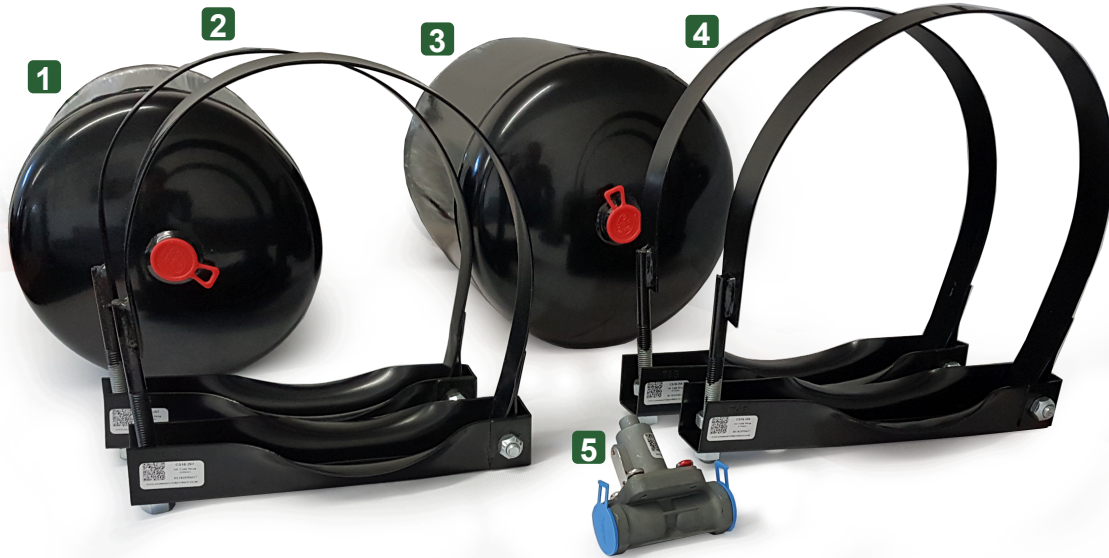

	Part Number	Description	OEM Ref
1	CS16-259	Air Tank 30ltr, 246mm Diameter	1010-151
2	CS16-257	Air Tank Strap 246mm (Pair)	1010-161
3	CS16-260	Air Tank 40ltr, 276mm Diameter	1010-150
4	CS16-258	Air Tank Strap 276mm (Pair)	1010-160
5	CS15-009	Pressure Protection Valve (Screws into tank)	IT961
6	CS15-036	Charging Valve	1010-111



	Part Number	Description	OEM Ref
7	CS15-028-01	Brake Chamber (Front Axle)	1030-029
8	CS15-037	Spring Brake Chamber	1030-025
9	CS15-033	Levelling Valve	1010-134
10	CS15-034	Raise/Lower Valve	HWDZ1200
11	CS16-242	ABS Sensor Ring	1440-056
12	CS15-035	Park/Shunt Valve	1010-139
13	CS10-079	ABS Sensor	1010-138

12  
2  
TE

\*Manufacturers and other wholesalers part numbers & names are used for cross reference purpose only and do not imply anything about the origin or manufacturer of the products\*